







SMEG OVEN OPERATION









1. Turn on the wall switch
2. Press the right hand small black button on the stove front. This will stop the time display flashing so that it remains static. Your oven will now allow you to select the heat and mode of cooking.
3. Select the mode of cooking from left turn dial. The most efficient setting for basic cooking is 11 o'clock.
4. Select temperature setting on right hand dial. The oven takes a while to heat up.
5. Remember Smeg grills with the oven shut because of the fan system.
6. The fan will stay on even after you have turned the oven off as the fan helps the cooling down process.

OVEN FUNCTION SELECTION KNOB











Key to symbols (multifunction model 5 functions)

	Oven light on
	Grill element
	Central grill element
	Central grill element + fan
	Grill element + fan
	Fan element or thawing

Key to symbols (multifunction model 8 functions)

	Top and bottom heating elements
	Grill element
	Bottom element
	Fan element + top and bottom elements
	Thawing
	Top and bottom elements + fan
	Grill element + fan
	Fan element

Key to symbols (multifunction model 10 functions)

	Top and bottom heating elements
	Grill element
	Bottom element
	Fan element + top and bottom elements
	Thawing
	Top and bottom elements + fan
	Grill element + fan
	Fan element
	Central grill element + fan
	Bottom element + fan